


TECH TIP #10

CATEGORY - TAPE Product - GT88/1
Reference - Configuring Bmx2 w/GT88 to work w/ROOS

- Problem :- GT88 will do FDUMP OKAY
- But Flood generates the following error:
- "TRAILER RECORD DOES NOT MATCH RECORD COUNT"
- BURST won't verify
- Sometimes you get parity errors with LOAD
COMMAND

Fix : Configure as follows.

DRIVE

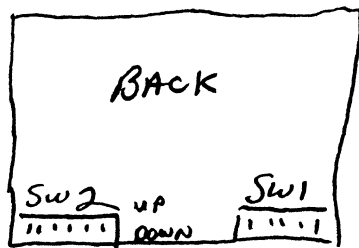

SW1 = 1 2 3 4 5 6 7 8
u u u u D u u u

SW2 = 1 2 3 4 5 6 7 8
u 0 u D u u u D

u = up D = down

Bmx2

MT 500

6026 AOS

READ Look Ahead enabled

} MUST BE SET THIS
WAY NO EXCEPTIONS